


**RotaBolt®**


## Installation Instructions

Revised September 03

1. **DO NOT REMOVE CAP** as this may cause seal damage.
2. **TIGHTEN FASTENER UNTIL CAP JUST LOCKS BY FINGER PRESSURE** there is no need to force the cap around.

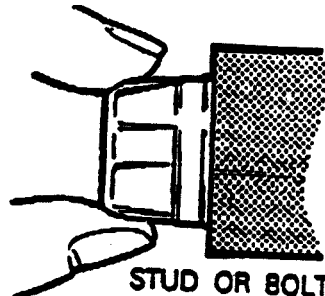

3. **STUDS UNLESS** otherwise specified the studs have been set with 3 threads clear of the nut.

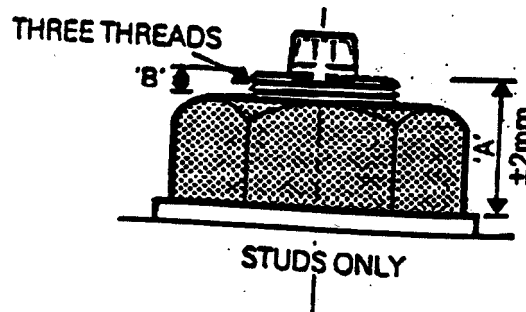

### **ADDITIONAL INSTRUCTIONS**

1. Set the top elevation of the Rowan anchor bolt so only 1 or 2 threads are above the top of the nut.
2. Tighten the anchor bolt until the cap just locks. If the final thread projection is 3 threads, or flush with the bottom of the wrench flat, the RotaBolt setting is correct.

If there is more than 3 threads projecting above the top of the nut, or less than 3 threads, loosen the nut, and adjust the thread projection up or down. Re-tightening the standard Rowan coupling nut will allow ½ inch of adjustment up or down.

**Warning!** Do not screw out the top stud more than ½ inch. There always must be enough thread engagement in the coupling to equal the diameter of the anchor bolt!

Verify after re-tightening that correct thread projection has been achieved.

---

Robt. L. Rowan & Assoc., Inc. · 3816 Dacoma · P.O. Box 920760 · Houston, Texas 77292-0760  
Tel (713) 681-5811 · Toll Free (800) 231-2908 · Fax (713) 681-5815

Visit our website at [www.rlrowan.com](http://www.rlrowan.com)

© Copyright 1999 – Robt. L. Rowan & Assoc., Inc.